

Resetting your MiFi

You can reset your MiFi to factory settings using the Reset button on the MiFi, from the MiFi touchscreen, or from the Admin web UI.


CAUTION: Resetting returns your MiFi to factory settings, including resetting the Wi-Fi name and password and Admin password. This disconnects all devices.

Resetting with the Reset button

To reset using the Reset button on the MiFi:

1. Insert a fingernail at the edge of the battery cover and lift and remove the battery cover. Set the cover aside.

The master Reset button is in a small hole located on the bottom of the MiFi.

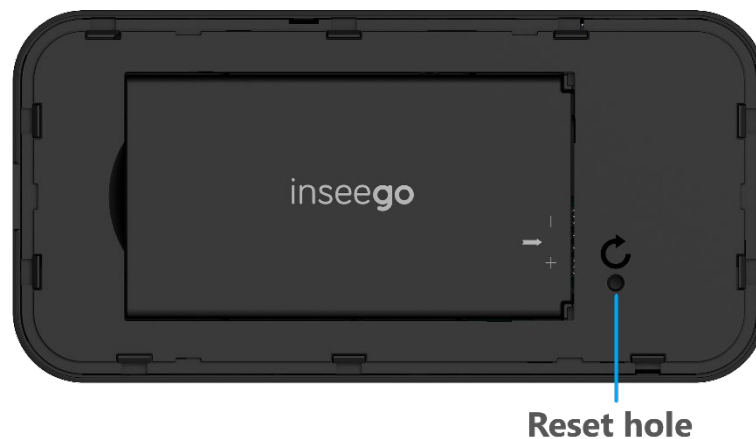

2. Place one end of an unfolded paper clip into the **Reset hole** and press until the screen displays **MiFi Resetting** (about five to six seconds). Your MiFi restarts with factory settings.

NOTE: This option may be disallowed from the Admin web UI (Settings > Preferences).

Resetting from the MiFi touchscreen

To reset from the MiFi touchscreen, tap **Menu > Settings > Factory Reset**.

NOTE: This option may be disallowed from the Admin web UI (Settings > Preferences).

Resetting from the Admin web UI

To reset the MiFi from the Admin web UI, select **Settings > Backup and Restore** and select **Restore factory defaults**.